

User's Manual



Diver-Pocket
Diver-Pocket Premium

Copyright Information

© 2011 Schlumberger Water Services. All rights reserved.

No portion of the contents of this publication may be reproduced or transmitted in any form or by any means without the express written permission of Schlumberger Water Services.

Printed in Canada

2011

Preface

Contacting Schlumberger Water Services

If you would like to contact us with comments or suggestions, you can reach us at:

Waterloo Office

460 Phillip Street - Suite 101
Waterloo, Ontario, CANADA, N2L 5J2

Phone: +1 (519) 746-1798

Fax: +1 (519) 885-5262

Delft Office

Delftechpark 20, Postbus 553
2600 AN Delft, The Netherlands

Phone: +31 (15) 275 5000

Fax: +31 (15) 275 5055

General Inquiries: sws-diver@slb.com

Web: www.swstechnology.com, www.water.slb.com

Obtaining Technical Support

To help us handle your technical support questions as quickly as possible, please have the following information ready before you call, or include it in a detailed technical support e-mail.

You may send us your questions via e-mail, fax, or call one of our technical support specialists. Please allow up to two business days for a response.

Hardware

- A complete description of the problem; when does the problem occur; what are the environmental conditions; etc.
- Product name and type
- If it concerns a Diver: provide a DAT-file (and/or MON-file) if applicable

Software

- A complete description of the problem including a summary of key strokes and program event (or a screen capture showing the error message, where applicable)
- Product name and version number
- Pocket-PC make and model number
- Operating system and version number
- Software installation directory
- Directory location for your current project files

Table of Contents

Preface	2
Contacting Schlumberger Water Services	2
Obtaining Technical Support	2
Hardware	2
Software	2
Table of Contents	3
1 Introduction	5
1.1 General.....	5
1.2 Diver-Pocket and Diver-Pocket Premium.....	5
1.3 List of Supported Devices.....	5
Reading Units	5
Divers.....	6
Interface Cables	6
1.4 Software and Hardware Requirements	7
2 Installing Diver-Pocket	8
2.1 Installation of Diver-Pocket with USB/RS232 Reading Unit.....	8
2.2 Upgrade Diver-Pocket to version 2011.1.....	10
2.3 Quick Installation Guide	10
3 Getting Started with Diver-Pocket	11
3.1 Launching Diver-Pocket	11
3.2 Diver-Pocket Tabs	11
3.3 Creating a Project.....	11
3.4 Reading Diver Data.....	12
3.5 Plotting Data	13
3.6 Hiding & Exiting Diver-Pocket	14
4 The Basics	15
4.1 Managing Projects	16
4.1.1 Editing and Opening an Existing Project	16
4.1.2 Creating a New Project	17
4.1.3 Deleting an Existing Project.....	18
5 Reading and Programming the Diver	19
5.1 Reading Data and Settings from the Diver	19
5.2 Viewing QA/QC Log.....	19
5.3 Reading Actual Data from the Diver	20
5.4 Programming the Diver.....	21
5.4.1 Monitoring Point	21
5.4.2 Sample Method and Record Interval.....	21
Fixed	21
Event Based	22
Averaging Sampling Method.....	22
Predefined Pumping Tests	22

User Defined Pumping Test (selected models only).....	23
5.4.3 Altitude (obsolete models)	25
5.5 Stopping a Diver	25
5.6 Starting a Diver	25
5.6.1 Smart Future Start	26
5.7 Managing Diver Data.....	26
5.8 Exporting Data to a PC	27
5.8.1 Using Explore in ActiveSync.....	27
5.8.2 Using Diver-Office.....	27
5.9 Time Series Plots	28
5.10 Plot Settings	29
6 CTD-Diver Calibration	30
6.1 Calibration	30
6.2 Calibration History.....	31
7 Application Settings.....	32
7.1 Changing the Units	32
7.2 Changing the Language	33
7.3 Compressing the Database.....	33
8 Troubleshooting	34
8.1 Interruption in Communication.....	34
8.2 Pocket-PC Power Management Issues.....	34

1 Introduction

1.1 General

Diver-Pocket is a software package that can be used on a Pocket-PC for programming Divers, reading stored measurements and exporting data. When used with a Pocket-PC, Diver-Pocket allows you to conveniently read and manage data in the field before exporting the data for further processing by other programs such as Diver-Office. In combination with one or more Divers, Diver-Pocket constitutes a complete and flexible measurement system.

1.2 Diver-Pocket and Diver-Pocket Premium

Diver-Pocket is available in two variants, namely;

- **Diver-Pocket:** This variant only allows you to read data; Divers cannot be stopped, calibrated or programmed.
- **Diver-Pocket Premium:** In addition to being able to read data, this variant also includes the Diver programming facility which allows you to calibrate CTD-Divers, start and stop Divers, define pumping test, etc.

Note: This manual can be used for both the Diver-Pocket and Diver-Pocket Premium. Please note that some features and functionality described in this manual are ONLY available in the Premium version, *i.e.*, programming Divers, calibrating Divers, stopping Divers etc.

Either Diver-Pocket or the Diver-Pocket Premium can be installed on a Pocket-PC. There are two installation packages:

- Diver-Pocket_2011_1_Setup.exe
- Diver-Pocket_Premium_2011_1_Setup.exe

A detailed description of the installation can be found in “*Installing Diver Pocket*”.

1.3 List of Supported Devices

Reading Units

Diver-Office supports the following Reading Units:

Reading Unit RS232	AS 315
Reading Unit USB	AS 324
Diver USB Reading Unit	AS 330

Divers

Diver-Office supports the following Diver groundwater dataloggers:

Cera-Diver	DI701 DI702 DI705 DI710
Mini-Diver	DI501 DI502 DI505 DI510
Micro-Diver	DI601 DI602 DI605 DI610
(M)TD-Diver	DI240 DI241 DI242 DI243 DI245
Baro-Diver	DI250 (TD-Style) DI500 (Mini-Style)
CTD-Diver (ceramic)	DI261 DI263 DI265 DI271 DI272 DI273
CTD-Diver (stainless steel)	DI218 DI219 DI221 DI222 DI223 DI224 DI227 DI225 DI226
TD-Diver	DI214 DI215 DI217 DI220
D-Diver	DI212 DI213

Interface Cables

Diver-Office supports the following Diver interface cables:

Direct Read Interface Cable	AS 325
PC Interface Boostercable	AS 326
DDC USB Interface Cable	AS 327
Direct Read Interface (short)	AS 328
FT-US232B EVALCABLE	HAD 211

1.4 Software and Hardware Requirements

Diver-Pocket requires the following hardware and software requirements:

PC Hardware Requirements:

- Microsoft Windows 2000, XP, Vista or Windows 7
- Microsoft ActiveSync 3.6 or later must be installed (comes with Pocket-PC)

Pocket-PC (PDA) Requirements:

- Windows Mobile 2003, Windows Mobile 5.0, Windows Mobile 6.0 or Windows Mobile 6.1.
- XScale or StrongArm Processor
- Pocket-PC is
 - With a USB Host port or
 - compatible with USB Host CF Card or RS232 CF Card

Please refer to your owner's manual to ensure that these requirements are satisfied.

USB Host CF card:

- <http://www.twin-paradox.com/SEPDA.html>
- <http://www.ratocsystems.com/english/products/subpages/cfu1u.html>
- <http://www.ratocsystems.com/english/products/CFU2U.html>

Diver-Pocket has been tested on the following Pocket-PCs:

- Archer Field-PC (Juniper Systems) 590MHz Windows Mobile 6.1
- Dell Axim X51 with Windows Mobile 5.0
- TDS Recon with Windows Mobile 6 Classic
- TDS Nomad with Windows Mobile 6 Classic

2 Installing Diver-Pocket

2.1 Installation of Diver-Pocket with USB/RS232 Reading Unit

As outlined in the hardware requirements, Diver-Pocket requires a USB Host Port. In case the Pocket-PC is not equipped with a USB Host port a USB Host Compact Flash (CF) card must be inserted in to the Pocket-PC in order to read data from the Diver. This card must be properly installed according to the manufacturer's instructions. The driver for the USB Host/RS232 CF card is delivered with the hardware, but is not included in the Diver-Pocket installation. The latest version of the USB Host/RS232 CF driver can be downloaded from the manufacturer's site: <http://www.ratocsystems.com/> or <http://www.twin-paradox.com/SEPDA.html>.


To install Diver-Pocket on your Pocket-PC, follow the steps below:

1. Before you start the installation of Diver-Pocket, make sure that the driver for the USB Host card is installed on your Pocket-PC.


For additional guidance with this step, please visit our online installation guide at the following address:

<http://www.swstechnology.com/groundwater-software/Diver-data-management/Diver-Pocket>

2. Make sure that the USB Host card is **not** plugged into your Pocket-PC. Please remove the card if it is plugged into your Pocket-PC.
3. Verify that the Pocket-PC is connected to your desktop PC.
4. Download the setup file from <http://www.swstechnology.com/groundwater-software/Diver-data-management/Diver-Pocket> and double click on either **Diver-Pocket_2011_1_Setup.exe** or **Diver-Pocket_Premium_2011_1_Setup.exe**.
5. Accept the default settings and select the following:
 - Microsoft .NET Compact Framework 2.0
 - Microsoft SQL Mobile 2005
 - SWS Reading Unit Driver
 - SWS Diver-Pocket.
6. Click **Install** to start the installation.

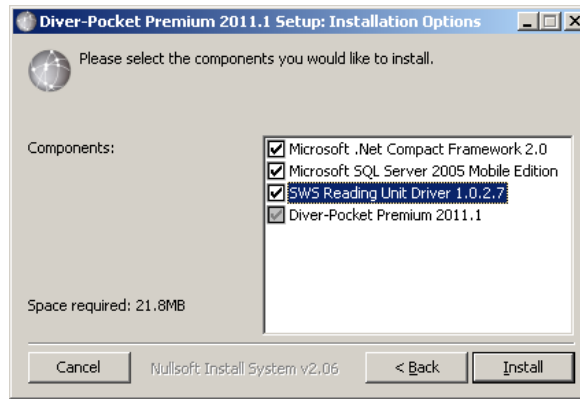


ActiveSync might display a dialog box with a list of programs that will be installed on your Pocket-PC. Programs that will be installed are marked with a grey checkbox.

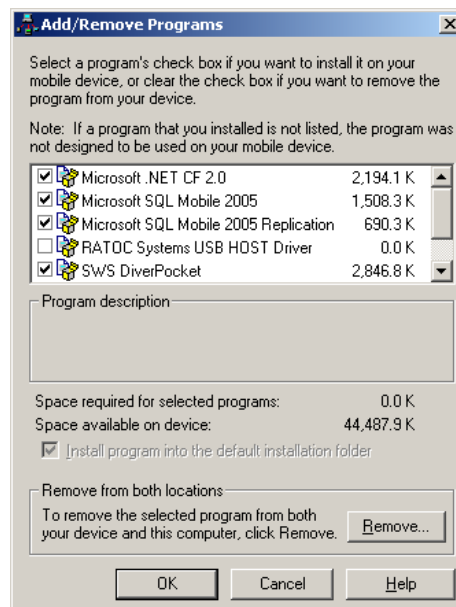

This screen does not always appear.

Note: On some Pocket-PCs you may be prompted to specify where to install the software: on the device or on removable storage. Please ensure that the “**Device**” option is always selected. Diver-Pocket will not work properly if it is installed on removable storage.

The Diver-Pocket installation will copy the required files to your Pocket-PC. Once the installation is complete, you will be prompted to verify whether additional steps are necessary (as shown below).

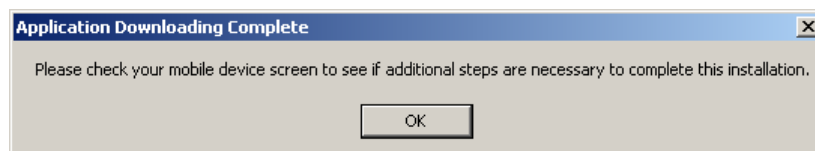

If you are running Windows Mobile 2003 Second Edition, you might find the following message on the screen of your Pocket-PC:

The program you have installed may not display properly because it was designed for a previous version of Windows Mobile.

This message may be ignored. Tap **OK** to continue.

7. A message will appear on your desktop PC confirming that the program has been successfully installed.
8. If needed, insert the USB Host/RS232 CF card to your Pocket-PC, and connect the Reading Unit to the USB Host Port or RS232 port.
9. Proceed to *Getting Started with Diver-Pocket*.

2.2 Upgrade Diver-Pocket to version 2011.1

If you already have a previous version of Diver-Pocket installed and you want to upgrade to the latest version during the installation, do not uncheck Microsoft .Net Compact Framework 2.0 option. You may uncheck the Microsoft SQL Mobile 2005 and SWS Reading Unit Driver options to speed up the installation. If you are upgrading from Pocket-Diver 2.x, after installing Diver-Pocket, Pocket-Diver 2.x may still exist on the Pocket-PC. You can safely remove the previous version through the **Remove Programs** dialog in Windows Settings.

2.3 Quick Installation Guide

- Remove the USB Host/RS232 CF card from the Pocket-PC.
- If required: Install USB Host/RS232 CF card driver (latest drivers can be found on <http://www.ratocsystems.com/> or <http://www.twin-paradox.com/SEPDA.html>)
- Run **Diver-Pocket_2011_1_Setup.exe** or **Diver-Pocket_Premium_2011_1_Setup.exe**.
- Plug in the USB Host/RS232 CF card.
- Connect the Reading Unit.

3 Getting Started with Diver-Pocket

This chapter will guide you through the basic steps to setup a project, acquire data from Divers and display data on your screen. The following chapters contain more details on specific topics and include Managing Projects and Managing Diver Data.

3.1 Launching Diver-Pocket

After a successful installation, Diver-Pocket can be launched by tapping the **Windows logo** in the upper-left corner of the Pocket-PC screen.


From the pop-up menu, tap **Programs**. Finally, tap the **Diver-Pocket** icon.

3.2 Diver-Pocket Tabs

There are three different screens (tabs) in Diver-Pocket: Project, Diver and Data.

- The main tabs will have an “**ok**” button located in the top-right corner. This button will *close* the application.
- All sub-tabs will have an “**ok**” button located at the top-right corner. This button will *Close* the sub-tab, but not the application.
- If information needs to be saved, a “**Save**” button will be displayed.

3.3 Creating a Project

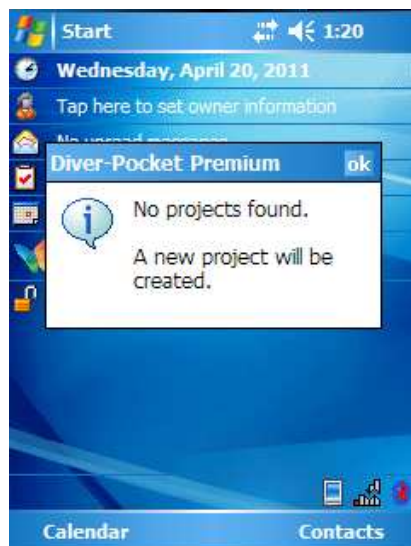

When starting Diver-Pocket for the first time, a message will inform you that the current database is empty and a new project needs to be created. Tap **ok** to proceed.

Enter a **Project Name** and tap the **OK** button

Confirm the default project settings by tapping the **Save** button.

3.4 Reading Diver Data

Diver-Pocket Prem 1:43 ok

Project Name:
My Project

Project Folder:
\\My Documents\DiverPocket\My P ...

Default Export Settings

File Name Format:
M. Point Date Serial No.

File Type:
MON Export on Download

Project Time Settings

Computer Standard DST

New Save Delete

Project Diver Data

Application

Tap the **Diver** tab at the bottom of the screen. A screen containing empty fields will be displayed (as shown to the left).

Make sure a Diver is connected to your Pocket-PC through a USB Reading Unit or USB Interface Cable.

Diver-Pocket Prem 1:43 ok

Serial No.:

Pres. Range:

Memory Left: Bat.:

Monitoring Point:

Sample Method: %

Record Interval: Hour

Altitude:

Settings Data Actual Plot


Stop Program Pumpout Celebrate

Project Diver Data

Application

Tap the **Data** button to download the settings and data from the Diver. A progress bar indicates the status of the download process. The fields (e.g. Location, Sample Method, Record Interval) should now contain the Diver information.

3.5 Plotting Data

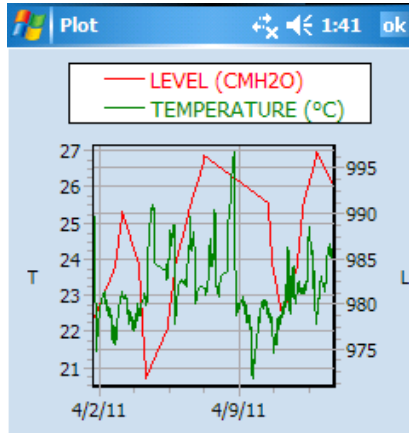

Parameter	Min	Max	Axis
LEVEL	400	6150	Right
TEMPERATURE	-20	80	Left

Legend Visible

3 Dimensions

Apply Cancel



Tap the **Plot** button to view the downloaded data as a time series plot.

Within the plot screen, you can navigate the time-series graph by using the zoom and pan tools.


Tap the **Settings** button to display information about the plotted parameters or to change the display settings.

If your Diver measures two parameters, assign the second parameter to the right axis. By doing so, the two parameters, each having a different range, will be shown on a different axis leading to a better resolution of both curves.

Tap **Apply** to close the plot settings screen.

You have now successfully downloaded data from a Diver and visualized the data in a time-series plot.

3.6 Hiding & Exiting Diver-Pocket

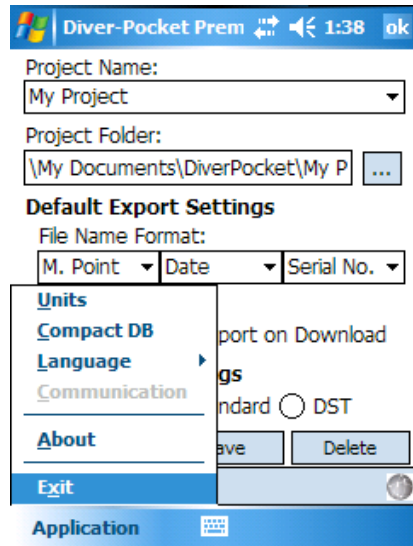

You can close Diver-Pocket by tapping the **X** in the upper-right corner or tap **Application** and then **Exit**.

4 The Basics


There are three different screens or tabs in Diver-Pocket (as shown below).

- The main tabs will have an “**ok**” button located in the top-right corner. If selected, this button closes the application.
- All sub-tabs will have an “**ok**” button located at the top-right corner. If selected, this button will *close the sub-tab*, but not the application, without saving.
- If information needs to be saved, a “**Save**” button will be displayed.


The first tab is the **Project** tab. At this screen you can define the project name, the project folder and the export settings. For more details on this topic, refer to *Managing Projects*.

The middle tab is the **Diver** tab. This screen is used for reading and programming Divers. For more details refer to *Reading and Programming the Diver*.


The third tab is the **Data** tab. Here you can plot and export data. For more details, refer to *Managing Diver Data*.

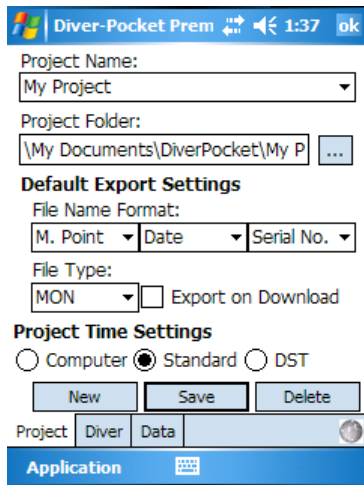

Project Tab

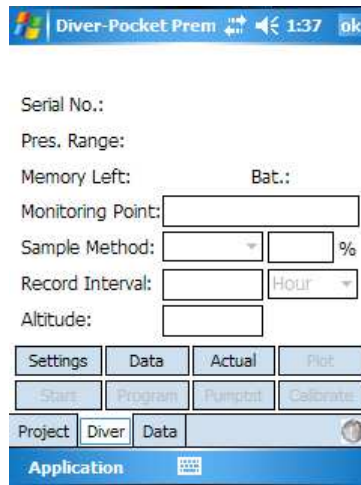

Diver Tab

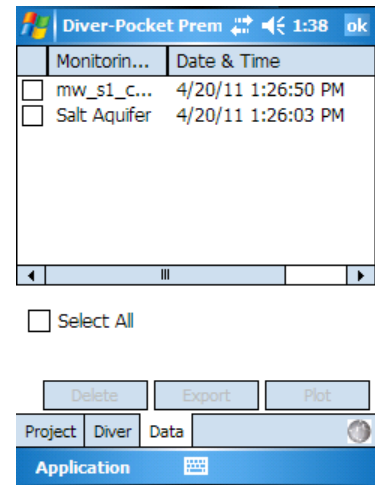


Data Tab

4.1 Managing Projects

In Diver-Pocket, a project combines data from multiple Divers, belonging to the same monitoring project. Each project can have its own default settings as defined by the user. As shown in the image below, each project requires a default project folder, an associated file name format and a file type for exporting data. When starting Diver-Pocket for the first time, you will be prompted to create a new project before proceeding.

4.1.1 Editing and Opening an Existing Project

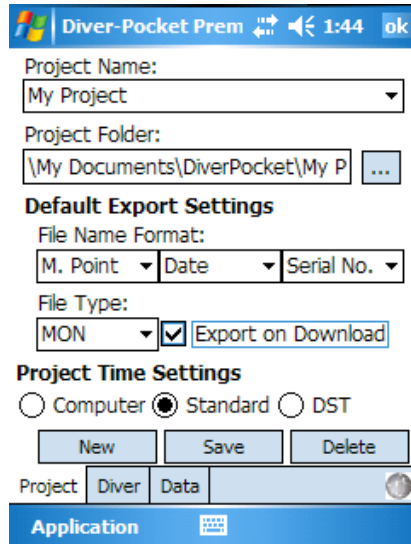

The screenshot shows the 'Project Settings' screen in the Diver-Pocket Premium application. At the top, there is a title bar with the application name and a timer. Below the title bar, the 'Project Name' is set to 'My Project'. The 'Project Folder' is set to '\\My Documents\DiverPocket\\My P'. Under 'Default Export Settings', the 'File Name Format' is 'M. Point Date Serial No.' and the 'File Type' is 'MON'. The 'Export on Download' checkbox is checked. Under 'Project Time Settings', the 'Standard' radio button is selected. At the bottom, there are 'New', 'Save', and 'Delete' buttons, and a navigation bar with 'Project', 'Diver', and 'Data' tabs.

Tap the **Project** tab to display the project settings. The project settings include the following fields:

The **Project Name** cannot be changed once the project has been created. Select an existing project from the **Project Name** drop-down box. If the current project has not been saved, you will be prompted to confirm the changes.

Project Folder: This is the location where the exported (.DAT, .MON and .CSV) data files will be stored. With every Diver download, a binary .DAT file will be created by default. The .MON or .CSV files can be created automatically by setting the default export flag (see below) or manually from the **Data** tab.

All created .DAT, .MON and .CSV files use the **File Name Format** settings. This allows you to associate a filename with three strings (serial number of Diver, location of Diver and timestamp of download). If the timestamp is not included as part of the filename (e.g. only serial number plus location name are included in name format), then a **_1**, **_2** etc. extension will be added to each file in order to make the filename unique. **NOTE:** It is good practice to include the timestamp in the filename.

File Type: This defines the type of files that are created when data is exported either manually or automatically.

If the **Export on Download** checkbox is checked, a file is exported automatically with every Diver download. If the Pocket-PC's memory is limited or if the additional export is too time consuming, you may export the same files manually from the database at a later point in time. **NOTE:** It is good practice to perform the export on a PC using Diver-Office (Premium).

Project Time Settings:

For long term monitoring projects, the time of all the measurements must be aligned to a standard time to ensure that the sampling frequency is consistent when the time changes due to day light savings time. Specifying the project time in Diver-Office ensures that your Diver is synchronized with the original Diver time and that no gaps or overlap occur in your data. You can choose from the following options:

Computer Time	If you choose this option, the project time will always be the same as your computer time. This is how project time worked in previous versions of Diver-Office
Winter Time <i>(Standard Time)</i>	If you choose this option, the project time will always be synchronized with standard time, e.g., UTC + x, where x depends on the time zones in your region; day light savings will be ignored.
Summer Time <i>(Daylight Savings Time)</i>	If you choose this option, the project time will always be synchronized with summer time, e.g., UTC + x – 1, where x depends on the time zone of your region; winter time will be ignored.


Most monitoring projects use standard time, completely ignoring day light savings time. In some rare cases, long-term monitoring is done using day-light savings time (winter time is ignored). Either time is acceptable, as long as it is maintained throughout the full duration of the monitoring project.

For short term projects or pumping tests, you will most likely use the computer time, as shifts in time due to day light savings are usually irrelevant.

Please note that in order for this feature to work, you must have the appropriate time zone selected in your Pocket-PC's **Date and Time Settings**.

Tap the **Save** button to save the settings of the current project.

4.1.2 Creating a New Project

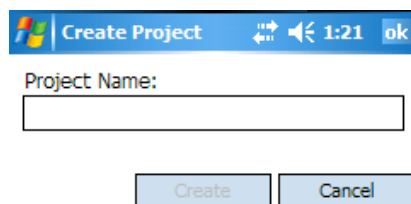

Tap the **Project** tab.

Tap the **New** button. The screen shown on the left will appear.

Enter a project name. **NOTE:** Do not use special characters (e.g. \ / : * ? " ' < > |) as the project name is the default name for the project folder.

Tap the **Create** button.

If necessary, modify the settings on the project screen as described in *Editing and Opening an Existing Project*.

4.1.3 Deleting an Existing Project


The screenshot shows the 'Diver-Pocket Prem' application interface. At the top, there is a status bar with the application name, navigation icons, a time display of 1:22, and an 'ok' button. Below this, the 'Project Name' is set to 'My Project'. The 'Project Folder' is '\My Documents\DiverPocket\My P'. Under 'Default Export Settings', the 'File Name Format' is 'M. Point | Date | Serial No.' and the 'File Type' is 'MON'. The 'Export on Download' checkbox is checked. Under 'Project Time Settings', the 'Computer' radio button is selected. At the bottom, there are three buttons: 'New', 'Save', and 'Delete'. Below these buttons is a tabbed interface with 'Project', 'Diver', and 'Data' tabs. The 'Project' tab is active, and a 'Delete' button is visible in the top right corner of the tab. The bottom of the screen shows an 'Application' bar with a grid icon.

Tap the **Project** tab.

Tap the **Delete** button to delete the current project and all related records in the database. The project folder will not be deleted automatically. Please use the **Windows Mobile** file explorer to delete the project folder from your Pocket-PC.

5 Reading and Programming the Diver

5.1 Reading Data and Settings from the Diver

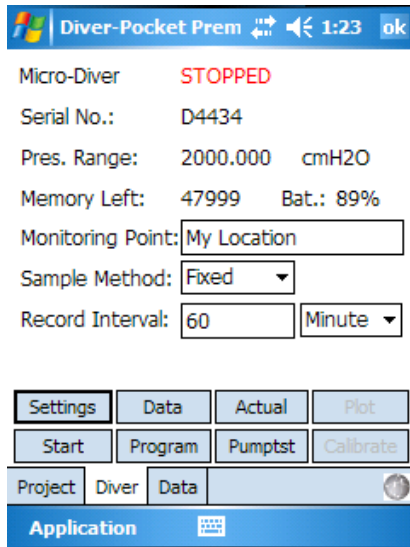

Tap the **Diver** tab to:


- read Diver data,
- program the Diver,
- start and stop the Diver.

Tap the **Settings** button to download the settings from the connected Diver.

Tap the **Data** button to retrieve the data from the connected Diver. The download process includes:

- Downloading the data to a binary .DAT file. This is an image of the Diver memory and is stored in a sub folder (DAT) of the project folder. The download time is approximately five minutes for the entire Diver memory (48,000 readings).
- Saving the data from the .DAT file to the database. This step takes less than ten seconds to complete.
- If specified in the project settings, the data may be automatically exported to a *.MON or *.CSV text file. For a full Diver memory, this step takes approximately one to two minutes to complete.

5.2 Viewing QA/QC Log

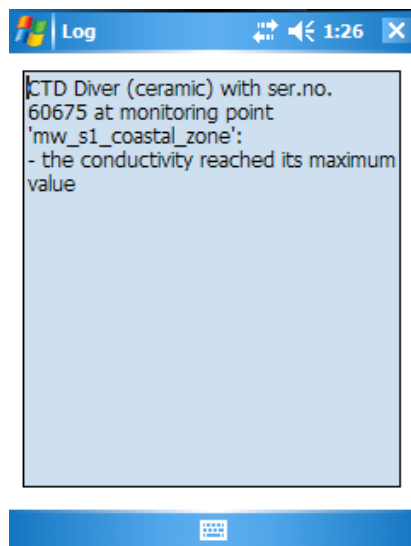

When data is downloaded from a Diver, Diver-Pocket performs a basic check for data that may be erroneous or corrupted. If erroneous data is detected, Diver-Pocket will list the time-series information and reason in the QA/QC log.

Some reasons for corrupted Diver data may include:

- The data includes **maximum** or **minimum** values, *e.g.*, for a CTD-Diver, if conductivity values are equal to the minimum values of zero this may suggest that the Diver was not submersed in water. If data is equal to the maximum this may suggest that the conductivity range is not suitable.
- The data is corrupted due to a low battery in the Diver.

5.3 Reading Actual Data from the Diver

Actual Data 1:27 ok

Monitoring Point: **My Location**

Sample taken at: 2/4/08 8:49:45 AM

Diver time: 2/4/08 8:49:46 AM

Parameter	Value	Unit
LEVEL	981.200	cmH2O
TEMPERATURE	25.860	Celsius

Refresh Verify

Tap the **Actual** button to display a real time measurement for each parameter of the connected Diver.

NOTE: These values are only displayed and not saved to the database. Also, real time measurements are only shown for the following Divers: Micro-Diver, Mini-Diver, Cera-Diver, and Ceramic CTD-Diver. Older Divers, such as the CTD stainless steel Diver, will only display the most recent stored measurements on all channels.

Tap **Verify** to enter a measurement manually and compare it to a measurement taken with the Diver (shown below).

Verification 1:36 ok

Cable Length:
 meter

Barometer:
 mbar

Manual Measurement:
 meter

Actual Value:
981.200 cmH2O

Difference:
2.432 cmH2O

Calculate

5.4 Programming the Diver

The screenshot shows the 'Diver-Pocket Prem' application interface. At the top, it displays 'Micro-Diver STOPPED' in red text. Below this, several fields are visible: 'Serial No.: D4434', 'Pres. Range: 2000.000 cmH2O', 'Memory Left: 47999 Bat.: 89%'. The 'Monitoring Point:' field contains 'My Location'. The 'Sample Method:' dropdown menu is set to 'Fixed'. The 'Record Interval:' field is set to '60' with a 'Minute' dropdown menu. At the bottom, there is a grid of buttons: 'Settings', 'Data', 'Actual', 'Plot', 'Start', 'Program', 'Pumptst', 'Calibrate'. Below the buttons are tabs for 'Project', 'Diver', and 'Data'. The bottom status bar shows 'Application' and a keyboard icon.

Diver-Pocket allows the programming of the following settings: **Location**, **Sample Method**, **Record Interval**, and **Altitude**.

To change any of these settings, manually enter the desired values. Once the new values have been entered, tap **Program**.

To confirm that the new settings have been programmed, tap **Settings**. The fields should appear blank for a moment before displaying the newly defined settings.

5.4.1 Monitoring Point

The Monitoring Point name is an identifier that may be specified by the user on the Diver tab. This is usually required if a Diver is assigned to a new Monitoring Point. **NOTE:** It is highly recommended that you assign a unique name to each Diver location. Also, since the Monitoring Point name will be used as part of the filename for exporting data, the Monitoring Point name does not accept special characters that would lead to an invalid filename (e.g. \ / : * ? * < > |)

5.4.2 Sample Method and Record Interval

The **Sample Method** may be one of the following:

- **Fixed**
- **Event-based** (selected models)
- **Averaging** (selected models)
- One of the predefined pumping test settings (**Setup A, B, or C**), or
- **User Defined** (selected models).

Fixed

A fixed sample method will acquire and store data at regular time intervals. Select a unit from the **Record Interval** drop-down box (e.g. Hour, Minute, Second, 0.5 Second) and enter an associated time value in the adjacent box.

Example

With a 10-second record rate, the CTD-Diver takes a measurement every 10 seconds on all channels settings and stores this value in its internal memory. The maximum number of measurements is 48,000. In this case, the internal memory will be full after 5 days, 13 hours, 19 minutes and 50 seconds. The Diver stops taking measurements when the memory is full.

NOTE: A CTD-measurement will be stored as a record with the data: **date + time + level + temperature + conductivity**. All measurements are imported together as one series in Diver-Pocket.

Event Based

When you select this method, the Diver compares each sample to the last stored sample and calculates a difference. A new sample is only stored when the difference exceeds a specified percentage from the last stored sample on the leading parameter. Generally, the leading parameter is pressure. For the *CTD-Diver* the leading parameters is conductivity.

If you select this method, the **Variation** field will be displayed. In the field **Variation**, specify the appropriate difference threshold. Enter this difference as a percentage of the total range of the Diver. The percentage must lie between 0.1% and 25%. Also, you must specify a **Sample Interval**

Example

Suppose you entered a variation of 2.5% for a CTD-Diver with an 30 mS/cm measuring range and a sample interval of 30 minutes. The CTD-Diver will then take a measurement every 30 minutes and compare it with the last stored conductivity value. It will only store a new measurement:

- if the conductivity differs by 0.75 mS/cm (i.e. 2.5 % of 30 mS/cm) or more from the last stored conductivity value, or
- if the conductivity did not differ by at least 0.75 mS/cm in the last 250 measurements.

Conductivity is the leading parameter for the CTD-Diver. Therefore, changes in water depth will not affect the storage of measurements.

NOTE: Energy is expended when a sample is acquired, even when the sample is not stored in memory. Therefore, this method may deplete battery resources before the Diver memory can be completely filled.

You can minimize this problem by specifying a modest sample interval.

Averaging Sampling Method

When programmed with the Averaging Sample method, the Diver samples data at a specified “fast” rate (**Sample Interval**) and then stores an average of these values at the specified averaging rate (**Record Interval**).

For example:

Record Interval: 1 hour

Sample Interval: 1 Minute

When programmed and started with these settings, the Diver will *read* a sample every minute, and *record* an average of the samples every 1 hour.

Predefined Pumping Tests

Diver-Pocket includes three convenient predefined pumping tests available from the **Sample Method** drop-down box. This method is only available for Divers that support this feature.

The specifications of these predefined sample methods are as follows:

Pumping Test Setup A

Base Record Interval: 0.5 seconds

Step	Number of samples	#Intervals
1	1200	1
2	5400	2
3	41400	10

Pumping Test Setup B

Base Record Interval: 1 second

Step	Number of samples	#Intervals
1	600	1
2	1080	5
3	5400	10
4	40920	30


Pumping Test Setup C

Base Record Interval: 5 seconds


Step	Number of samples	#Intervals
1	120	1
2	270	4
3	900	12
4	1800	60
5	44910	240

User Defined Pumping Test (selected models only)


You may also define your own pumping test sample method by tapping the **Pumptst** button and specifying the necessary details:

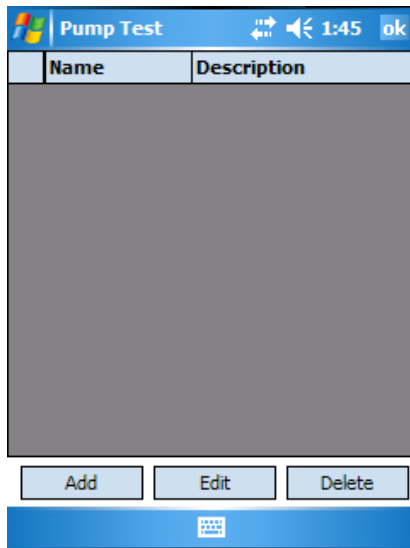

Tap the **Pumptst** button to display the **User Defined Sample Method** screen.

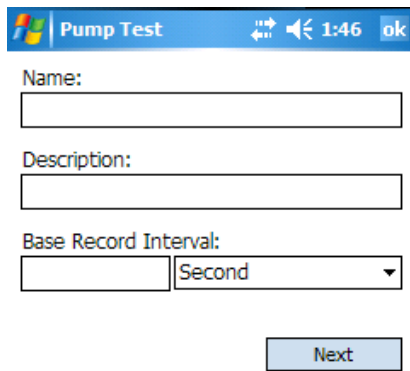

Tap the **Add** button and a new dialog box will appear. Specify a name, description (optional), and a base sample rate. Once these fields are completed, tap the **Next** button to continue.

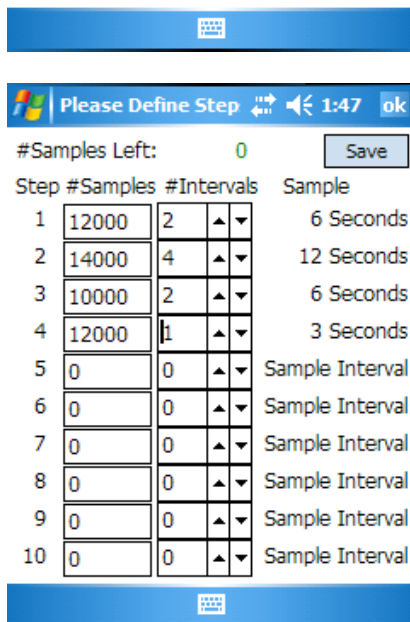


In the **Define Step** dialog, you must enter the number of samples and the number of intervals for your sample method (as shown to the left).

Tap the **Save** button to save the method. A pop up message will appear confirming the method has been saved.

Tap **ok** to return to the previous dialog and then **ok** again to return to the main **Pump Test** dialog.

NOTE: In order to save the sample method, the total number of samples must equal the total memory of the connected Diver.

5.4.3 Altitude (obsolete models)

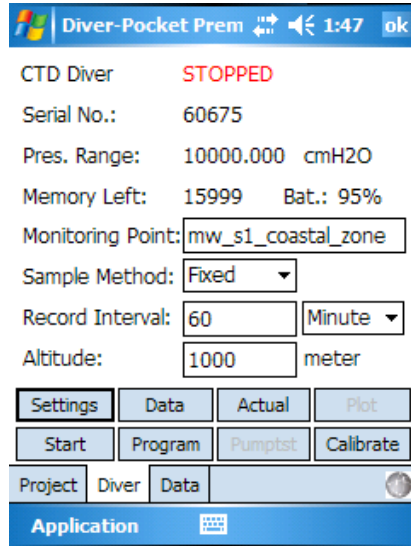

Specify the altitude above sea level for the location of the Diver. The value entered will be in the units that are programmed in the Diver. (i.e. meters or feet). The ranges are:

- -300 m to 3,000 m
- -1,000 ft to 10,000 ft

Note: Altitude is only available for Divers including DI240-DI245, DI209-DI220.


5.5 Stopping a Diver

In order to stop a Diver, the settings must have been read and the status must be “started”.

Tap the **Stop** button. A confirmation screen will be displayed to prevent accidental stopping of the Diver. Tap **Yes** to stop the Diver or tap **No** to prevent the Diver from being stopped.

5.6 Starting a Diver

Before you start a Diver, make sure that you have programmed the Diver using the **Program** button. After tapping **Program**, the fields will momentarily appear blank before displaying the settings. Verify that the settings are correct.

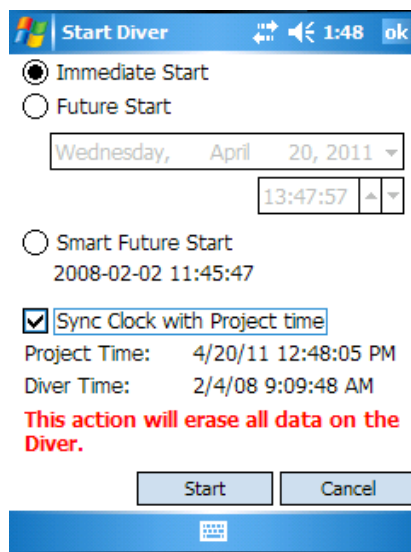

To start a Diver, tap the **Start** button to display the **Start Diver** dialog box.

Select **Immediate Start** to start the Diver immediately, or select **Future Start** to specify a future start-time.


Smart Future Start automatically restarts the Diver at the next required sample time based on the original start-time and the sample interval. You may also choose to synchronize the Diver’s internal clock with the project time by checking the **Sync Clock with Project Time** checkbox box.

ATTENTION:


All data in the Diver memory will be erased and irretrievable once the Diver is started. Be sure to download this data before proceeding.

5.6.1 Smart Future Start

The **Smart Future Start** option provides optimal use of Diver memory, download speeds and data management. The Smart Future Start option can be explained best by the picture depicted below. Suppose the Diver was started at t_0 and data was collected. At t_1 , the Diver is stopped and *data 1* is read. The Smart Future Start time is given and the Diver proceeds to sample as if it was not stopped. At t_2 , data 2 is collected, the Diver is stopped and the Smart Future Start time is given. *Data 2* can then be linked to *data 1* in the Diver-Office Premium. To ensure that timed data is accurate, the Smart Future Start can be synchronized with the Pocket-PC clock by checking the **Sync Clock** box.

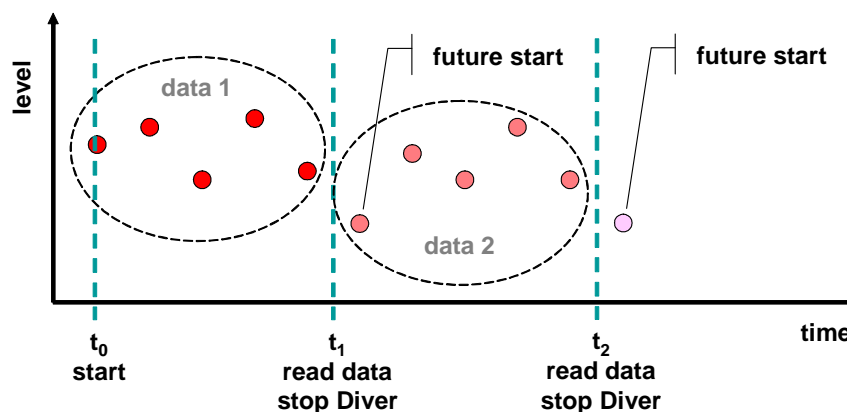

5.7 Managing Diver Data

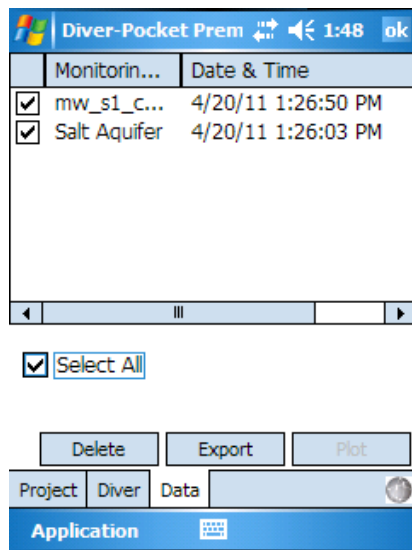

Tap the **Data** tab. You will see a list of all downloaded time series of the current project.

Every Diver download is saved to the database as a time series. A time series is defined by the monitoring point name, a timestamp of the download time, and a unique Diver serial number. You may select one or several time series.

Tap the **Export** button to export all selected time series to text files, e.g., *.MON, *.CSV. This will create one file for each selected time series in the project folder. Remember, the file format, name, and target path (Project Folder) are defined in the project settings on the **Project** tab.

Tap the **Delete** button to delete the selected time series from this project.

NOTE: After you delete a time series, apply the **Compact Database** command from the **Application** menu. This will shrink the database file and save space on the Pocket-PC.


Tap the **Plot** button to display the selected time series in a plot. Note that this command is only available when only one time series is selected.

5.8 Exporting Data to a PC

To transfer data from the Pocket-PC to your Desktop PC, connect the Pocket-PC to your Desktop PC and start Microsoft ActiveSync (if not automatically started).


5.8.1 Using Explore in ActiveSync

Click the **Explore** button to browse the contents of the Pocket-PC (as shown below). You can transfer files to your PC by using **Copy/Paste** or **Drag/Drop**.

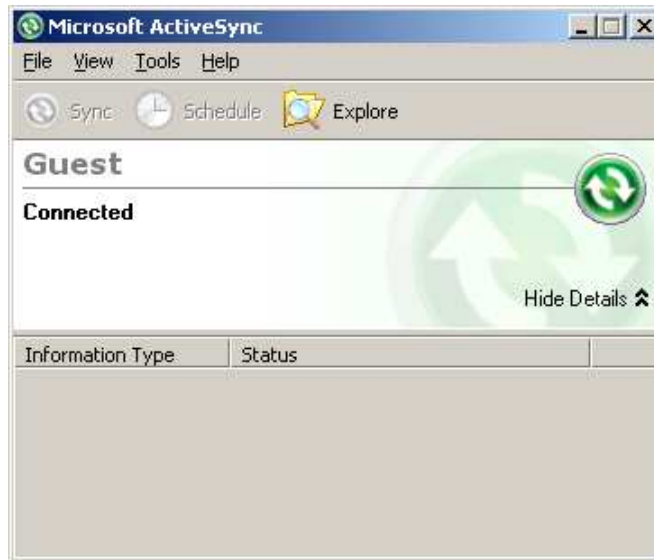

5.8.2 Using Diver-Office


In Diver-Office from the toolbar select **Import > Diver-Mate/Diver-Pocket** and click the **Receive** button to download the data.

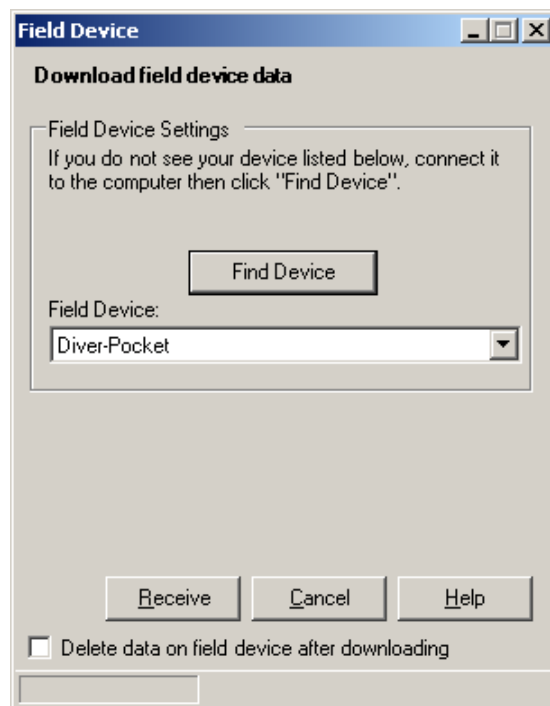

Note 1 If the **Delete data on field device after downloading** option is checked, the data of the field device will be copied to the computer. If this action is not successful no data will be deleted on the field device.

Note 2 Data on the field device will be treated as Diver data. This means that if one or more file export formats are selected and the option **Export on download** is checked in the project settings the imported data from the field device will be exported to the selected export formats.

5.9 Time Series Plots

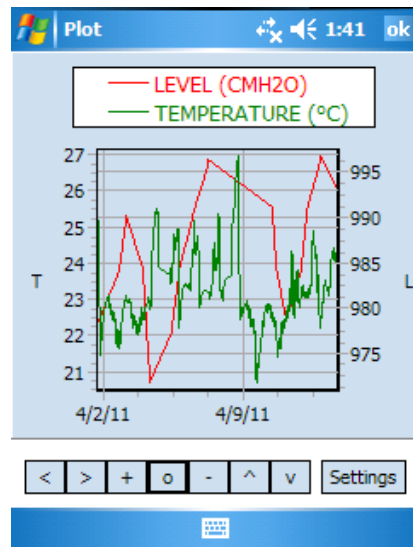



 



 
There are two ways to display downloaded data in a time series plot:

- Tap the **Logger** tab and tap **Data** to download data from the Diver. As the download is finished, the plot button will become active. Tap the **Plot** button. This will display the downloaded data.
- Tap the **Data** tab. Select a record from the stored list. Tap the **Plot** button to display the downloaded data.


To enhance the plotting speed, Diver-Pocket will resample the data whenever a time series plot is made. **NOTE:** Only values that are different by 0.1% will be displayed.

The data for all the available parameters will be displayed. To hide a parameter, tap on its name in the legend. Tap it again to unhide it.

You may use the following navigation buttons to view a selection of the plot in more detail:

- | | |
|---|------------------------|
|  | Move left |
|  | More right |
|  | Zoom in |
|  | Reset default settings |
|  | Zoom out |
|  | Move up |
|  | Move down |

5.10 Plot Settings

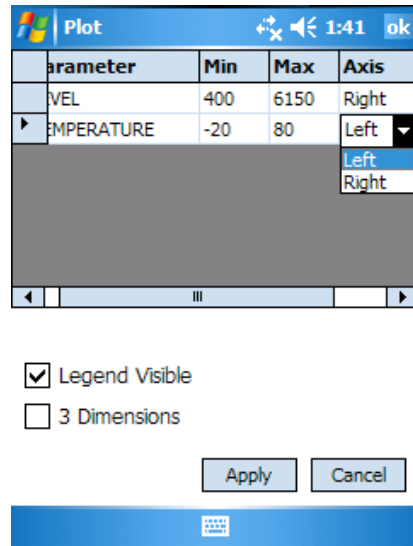

Tap the **Settings** button to display the parameter settings (as shown to the side).

The grid in the upper part of the screen displays the parameters that are available in the plotted time series. The minimum and maximum values are read from the Diver settings and cannot be changed. However, you may assign parameters to individual axis to improve the vertical resolution of the plotted parameters. The last column of this grid allows you to define how the data is represented on the plot (e.g. lines or bars).


Check the **Legend Visible** box to make the plot legend visible.

The **3 Dimensions** option allows you to give your plot a 3D or 2D appearance.

6 CTD-Diver Calibration

Diver-Pocket features the ability to calibrate the ceramic CTD-Divers as well as retrieve the calibration history from the CTD-Diver. It is necessary to regularly calibrate the CTD-Divers to ensure accuracy and reliability.

6.1 Calibration

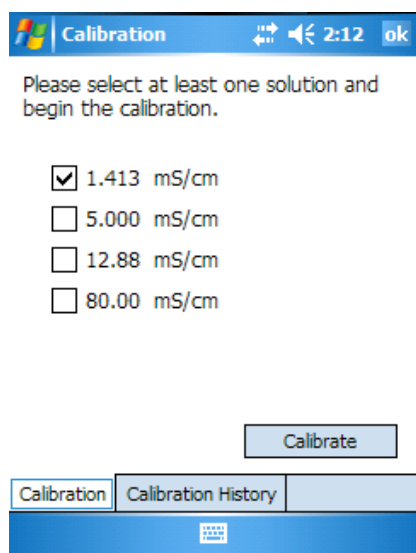

The ceramic CTD-Diver can be calibrated at a maximum of four points. The solution must have a temperature between 5 °C (41 °F) and 30 °C (86 °F). **NOTE:** It is strongly recommended to place the CTD-Diver and calibration solution(s) in a room where the calibration is to take place before starting the actual calibration. Once all components have stabilized, you can proceed to calibrate the CTD-Diver.

Connect the CTD-Diver to the Pocket-PC and immerse the CTD-Diver in the solution.

Tap the **Diver** tab and then tap the **Settings** button to read the settings from the Diver.

Once the Diver is recognized as a CTD-Diver, the **Calibrate** button will become active.

Next, tap the **Calibrate** button to open the *Calibration* wizard.

Select the check box(es) next to the appropriate solution(s) that will be used to calibrate the Diver.


Tap the **Calibrate** button to begin calibrating the CTD-Diver.

A message will appear stating that all data on the CTD-Diver will be erased, tap **Yes** to continue or **No** to cancel.

A message will appear to immerse the CTD-Diver in the selected solution. Tap **Ok** to continue.

Diver-Pocket will then calibrate the CTD-Diver according to the specified solutions. If the calibration was successful, a message will appear. Tap **Ok** to continue.

6.2 Calibration History

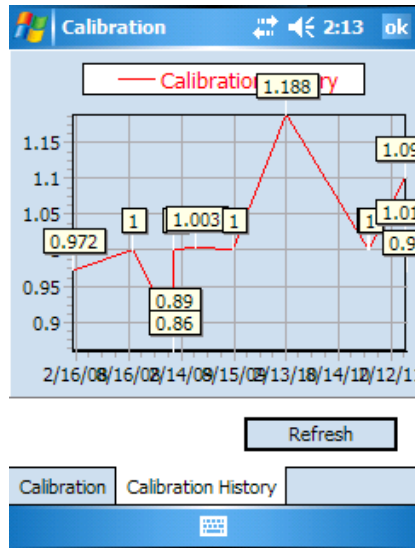

Diver-Pocket is also capable of reading and displaying the calibration history from CTD-Divers. Each time a CTD-Diver is calibrated, the settings are saved to the CTD-Diver's internal memory. This feature is useful for monitoring changes in calibration over time which may aid in explaining significant variations or anomalies in data.

Ensure the CTD-Diver is connected to Pocket-PC.

Tap the **Diver** tab, and then tap the **Settings** button to read the settings from the Diver.

Once the Diver is recognized as a CTD-Diver, the **Calibrate** button will be made available.

Tap the **Calibrate** button to open the *Calibration* wizard.


Tap the **Calibration History** tab at the bottom of the screen (as shown on the left).

The *Calibration history* will be displayed as a plot.


7 Application Settings

You can modify the default application settings in Diver-Pocket by accessing the **Application** button (as shown below).

7.1 Changing the Units

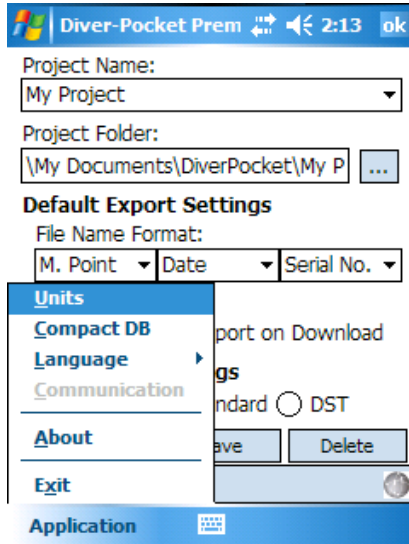

Tap on **Units** to change the default units.

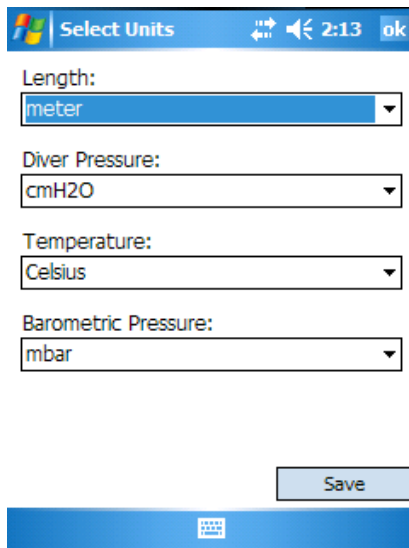


From the drop-down menus, specify a unit for each parameter (Length, Diver Pressure, Temperature, Barometric Pressure).

Tap **Save** to store the changes. The settings will apply to the entire Application and export files.


Note: The **Barometric Pressure** units are only used in the **Actual** form, please refer to the *Reading Actual Data from the Diver*.

7.2 Changing the Language

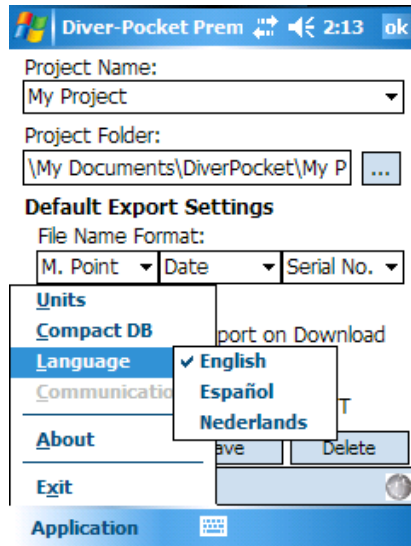

This option allows you to change the language of Diver-Pocket. Select from **English**, **Spanish** and **Dutch**.

7.3 Compressing the Database

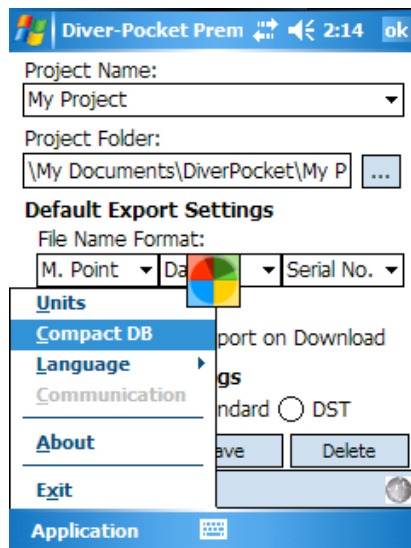

Please recall that deleting any data in the database does not shrink the size of the database. Tap **Application** in the menu bar and then tap **Compact DB** to compact the database (as shown to the side).

8 Troubleshooting

8.1 Interruption in Communication

Diver-Pocket will inform you with a message if the communication between the computer and the Diver is disturbed, *e.g.*, when there is no Diver connected.

You can confirm the message, take action to solve the problem and then try again. Communication may be disturbed for the following reasons:

- The USB Reading Unit is not properly connected to the Pocket-PC.
Action: Ensure the USB Reading Unit or RS232 Reading Unit is connected to the Pocket-PC.
- Diver-Pocket tried to communicate with the Diver just as it was taking a measurement.
Action: Confirm the message and try again.
- The Diver is not properly connected to the USB Reading Unit or RS232 Reading Unit.
Action: Ensure that the optical connectors on both the Diver and the USB Reading Unit are clean. If not, you can clean them with a soft cloth.
- The Pocket-PC shows a message that an unknown device was found.
Action: see bullet points below.

If the actions outlined above do not resolve the communication problem, proceed as follows:

- Exit the Diver-Pocket program using menu **Application** → **Exit**
 - Unplug the USB Host CF card
 - Disconnect the USB Host CF card from the USB Reading Unit
 - Plug in the USB Host CF card
 - Connect the USB Reading Unit to the Pocket-PC
- Wait 5 seconds
- Start the Diver-Pocket program and tap the **Read** button

If these actions do also not solve the issue, try a **Soft Reset** of the Pocket-PC as described in the product Pocket-PC manual.

8.2 Pocket-PC Power Management Issues

Default settings on most Pocket-PCs automatically shut off if there is no user activity for a set length of time, typically 3 to 5 minutes. This can cause the Pocket-PC to shut off and disrupt the download process. To avoid this problem, the **Power Settings** must be changed on the Pocket-PC. In Windows Mobile, these settings can be accessed in the following manner:

Tap **Start** menu > **Settings** > **System** tab at bottom of **Settings** window > **Power** icon > **Advanced** tab

At this screen, there will be a check box which can turn the power save feature on or off. It is recommended that this feature is disabled when working with large datasets to avoid download disruption.

Index

A

Altitude, 25
Units, 32

C

Compressing database.
CTD-Diver
 Calibration, 30
 Calibration History, 31
CTD-Diver Calibration, 30

D

Diver
 Programming, 21
 QA/QC, 19
 Reading actual data, 20
 Reading Settings, 19
 Starting, 25
 Stopping, 25
Diver Settings
 Altitude, 25
 Sample Method, 21
 Monitoring Point, 21
 Record Interval, 21
Diver-Pocket
 General, 5
 Hardware Requirements, 7
 Installation, 8
 Premium, 5
 Software Requirements, 7
 Tabs, 15

E

Exporting Data, 27

F

File Name Format, 16

G

Getting Started, 11

L

Language setting, 33

P

Project
 Create, 17
 Delete, 18
 Edit, 16
 Folder, 16
 Manage, 16
 Name, 16
 Open, 16
 Time Settings, 17

S

Sample Method
 Averaging, 22
 Event Based, 22
 Fixed, 21
 Predefined Pumping Tests, 22
 User Defined Pumping Test, 23
Smart Future Start, 26
Supported Devices, 5
 Divers, 6
 Interface Cables, 6
 Reading Units, 5

T

Time series plots, 28
 Settings, 29

U

Upgrading Diver-Pocket, 10